


35mm 4-LENS CAMERA User Manual

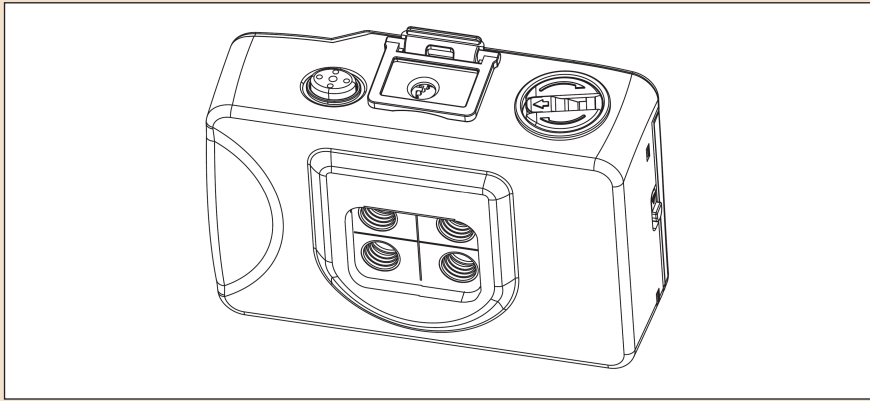


This camera is equipped with four built-in lenses. By pressing the shutter button once, the camera captures four consecutive images within a single frame. It is designed to record fast-moving subjects by producing a sequence of four shots in rapid succession.




Before using this product


The camera is pre-loaded with the first roll. This manual covers loading the second roll, so keep the back cover closed until the first roll is finished.

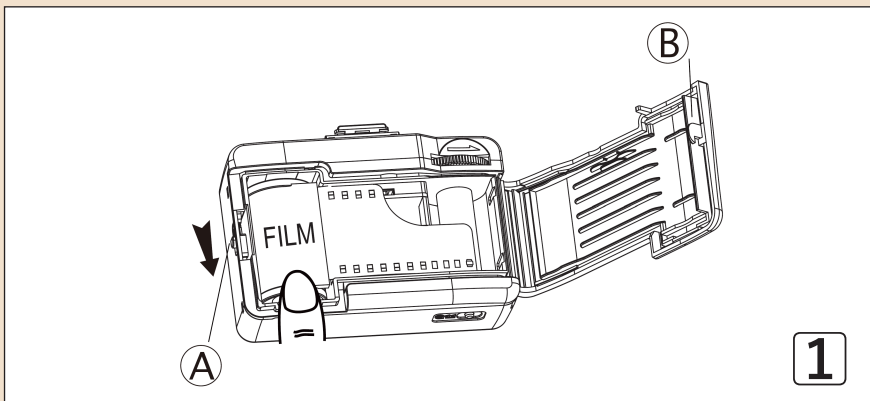


Slide Switch **A** downward in the direction of the arrow, then open back cover **B** to load the film into the camera.

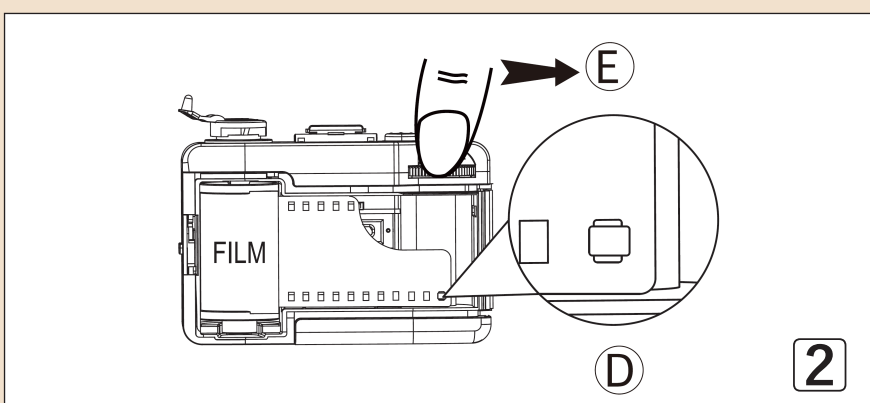


Pull the film out from the cartridge and insert the leader into the hook on Take-up Spool **D**. Then rotate advance dial **E** until the film is firmly engaged with the spool.

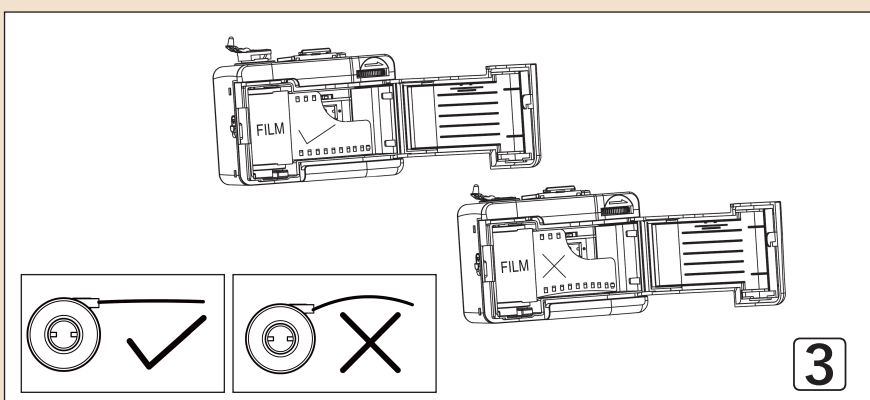


Make sure the film lies flat in the film chamber, then close the back cover securely.

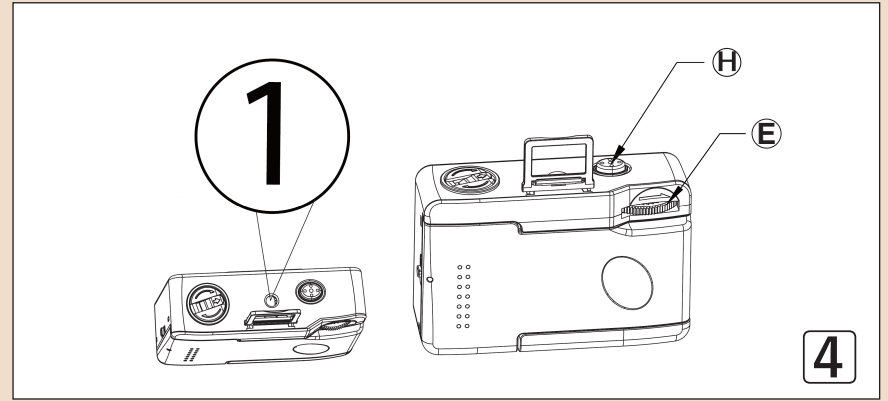


Turn the advance dial **E** to transport the film, then press shutter button **H**. Repeat this operation until the frame counter indicates "1," confirming that the camera is ready for normal shooting.

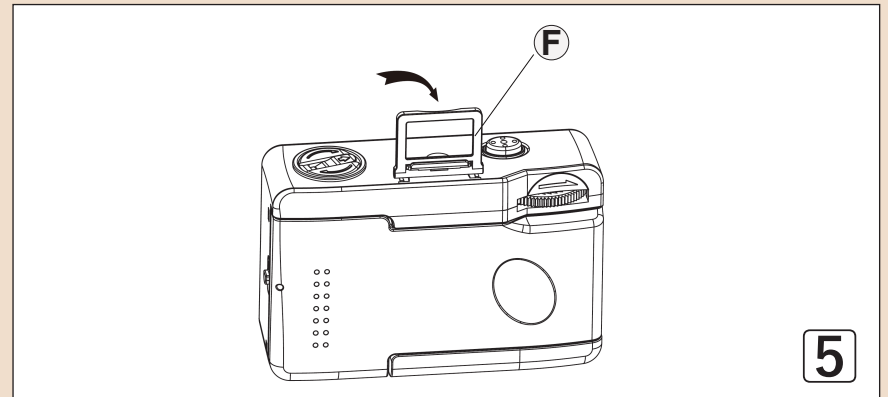


Raise the viewfinder **F** and look through it, then point the camera toward the subject you wish to photograph.

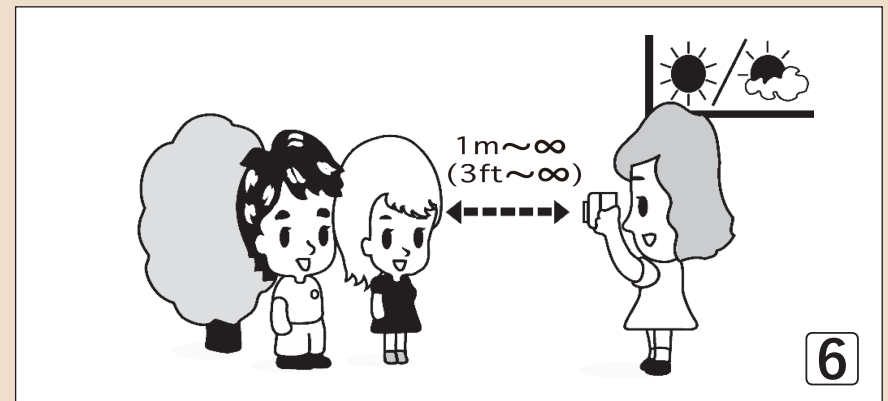

This product is intended for outdoor use only. For optimal image quality, shoot in bright daylight and maintain a distance of at least 1 meter between the camera and the subject. Ensure that the subject is illuminated from the front before taking a photograph.

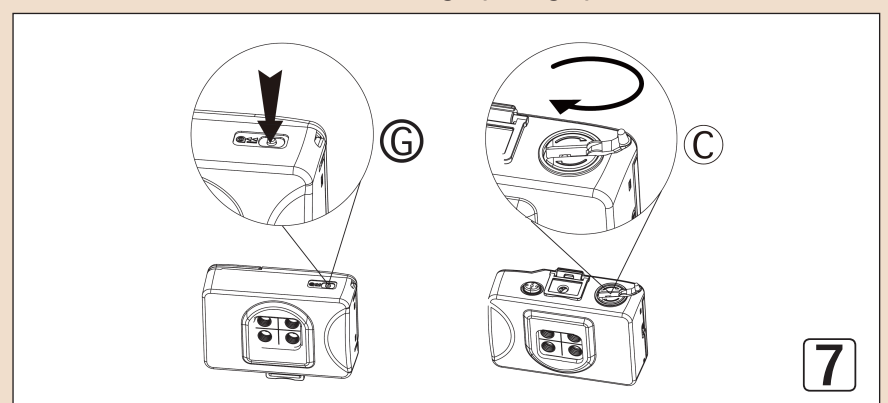

After finishing the roll, press rewind button **G** on the bottom of the camera. Then turn rewind crank **C** clockwise to wind the film back into the cartridge.

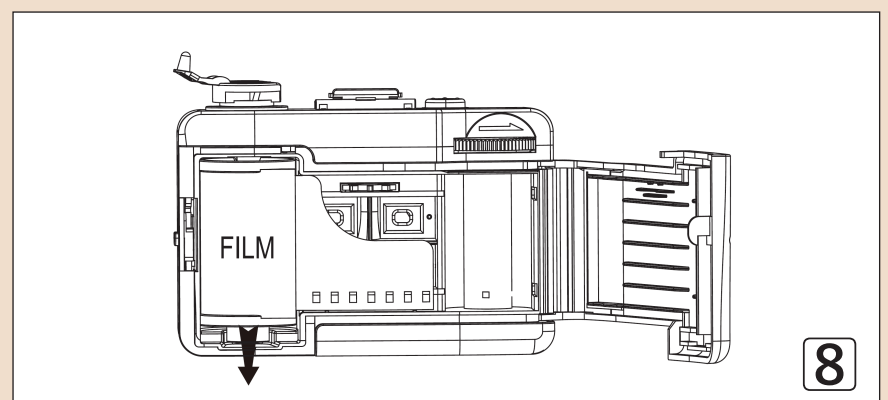

Open the back cover, lift the rewind crank, and remove the film. Have the film processed as soon as possible.